

KOGANEI

ACCESSORIES GENERAL CATALOG

AIR TREATMENT, AUXILIARY, VACUUM, **AND FLUORORESIN PRODUCTS**

QUICK FITTINGS WITH STOP VALVES

CONTENTS


Specifications, Order Codes, Size Table —————	363
Dimensions —	364
NCU Specification, Non-lubricant Specification	
Order Codes, Model Table —	366
Safety Precautions, Handling Instructions and Precautions ——	367

QUICK FITTINGS WITH STOP VALVES

- Come with a stop mechanism that automatically shuts off the air flow if a tube is disconnected.
- Hard to be pressure exerted construction, to ease tube connection and disconnection.


Symbol

Inner Construction, Major Parts and Materials

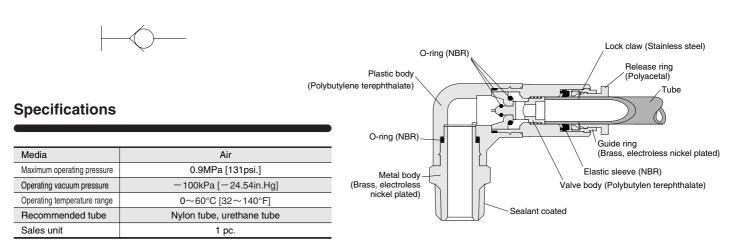

Remark: Supplied with a gasket or sealant coated.

Order Codes

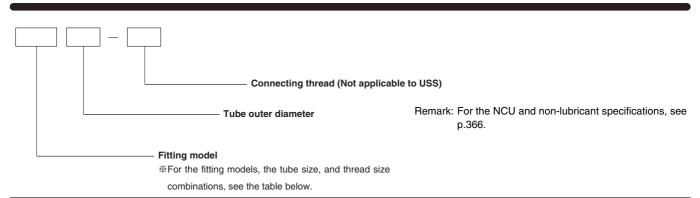

●TSS Straight 364



Tube size	Thread size							
	M5×0.8	R1/8	R1/4	R3/8	R1/2			
4	M5	01			_			
6	M5	01	02	_	_			
8	_	01	02	03	_			
10	_	_	02	03	04			
12	_	_	_	03	04			




Tube	Thread size						
size	M5×0.8	R1/8	R1/4	R3/8	R1/2		
4	M5	01	_	_	_		
6	M5	01	02	_	_		
8	_	01	02	03	_		
10	_	_	02	03	04		
12	_	_	_	03	04		




Tube size
4
6
8
10
12

Straight TSS



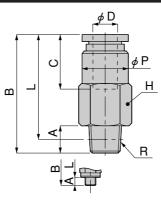




Metric thread type


Model	Tube outer diameter ϕ D	R	А	В	Note L	φ P	С	Width across flats H	Х	Υ	Effective area (mm²)	Mass (g) [oz.]
TSS4-M5		M5×0.8	3	28.4	25.4	8	40.4	8	- •	0.0	1.6	7 [0.247]
TSS4-01	4	R1/8	8	23.9	19.9	8.8	12.1	10	7.8	9.8	2	9.6 [0.339]
TSS6-M5		M5×0.8	3	31.7	28.7	4.0		4.0			2.3	12 [0.42]
TSS6-01	6	R1/8	8		22.9	10	13.4	10	9.8	11.8	7.0	9.2 [0.325]
TSS6-02		R1/4	11	26.9	20.9	12		14			7.3	22 [0.78]
TSS8-01		R1/8	8	35.7	31.7		22.3				9.1	00 10 041
TSS8-02	8	R1/4	11		30	14		14	13.8	_	14.2	23 [0.81]
TSS8-03		R3/8	12	36	29.7	15	18.3	17			15.8	39 [1.38]
TSS10-02		R1/4	11	38.3	32.3		24.7				17.8	32 [1.13]
TSS10-03	10	R3/8	12		33.5	17		17	16.8	_		37 [1.31]
TSS10-04		R1/2	15	39.8	31.6	18	20.7	21			24.9	64 [2.26]
TSS12-03		R3/8	12	45.8	39.5		29.1				28.8	65 [2.29]
TSS12-04	12	R1/2	15	45.9	37.7	20.8	23.1	21	19.8	_	31.8	66 [2.33]

Note: The L dimensions for the tapered thread type are the reference dimensions after the fittings are assembled.

Elbow TLS



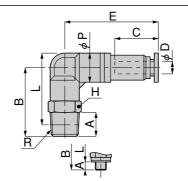



X Colons vin

Release ring standard type

Metric thread type

Model	Tube outer diameter ϕ D	R	Α	В	L	φ P	С	E	Width across flats H	Х	Y	Effective area (mm²)	Mass (g) [oz.]
TLS4-M5		M5×0.8	3	20.3	22.3							1.5	13 [0.46]
TLS4-01	4	R1/8	8	23.3	24.3	10	12.1	29.7	10	7.8	9.8	1.8	16 [0.56]
TLS6-M5		M5×0.8	3	22	25.3							2.3	20 [0.71]
TLS6-01	6	R1/8	8	25	27.3	12.5	13.4	30.1	12	7.8	9.8	6.8	22 [0.78]
TLS6-02		R1/4	11	28	28.2				14			8.1	30 [1.06]
TLS8-01		R1/8	8	28	31.3							13.7	35 [1.23]
TLS8-02	8	R1/4	11	31	32.2	14.5	18.3	43	14	13.8	_	13.2	41 [1.45]
TLS8-03		R3/8	12	32.8	33.7				17			14.5	54 [1.90]
TLS10-02		R1/4	11	36	38.7							21.4	59 [2.08]
TLS10-03	10	R3/8	12	37	39.4	17.5	20.7	49.3	17	16.8	_	21.9	67 [2.36]
TLS10-04		R1/2	15	40	40.6				21			21.3	90 [3.17]
TLS12-03		R3/8	12	39	43.2							30.2	92 [3.25]
TLS12-04	12	R1/2	15	42	44.3	21	23.1	57.1	21	19.8	_	29.8	108[3.81]

Note: The L dimensions for the tapered thread type are the reference dimensions after the fittings are assembled.

Union straight USS






Release ring mini type ϕ D: 4, 6



Release ring standard type



Model	Tube outer diameter ϕ D	В	φ P	C1	C2	Х	Υ	Effective area (mm²)	Mass (g) [oz.]
USS4	4	35.6	8.5	12.2	11	7.8	9.8	2	3.8 [0.134]
USS6	6	38.8	11	13.3	11.6	7.8	9.8	7.1	5.9 [0.208]
USS8	8	54.2	14.5	18.2	18.1	13.8	_	15.4	17 [0.60]
USS10	10	60	17.5	20.3	20.2	16.8	_	22.4	27 [0.95]
USS12	12	70.2	21	23.2	23.4	19.8	_	30	42 [1.48]

QUICK FITTINGS WITH STOP VALVES

NCU Specification and Non-lubricant Specification

NCU Specification and Non-lubricant Specification


●For specifications, see p.363.

●The dimensions, inner construction, major parts and materials for the **NCU** specification and non-lubricant specification shown below are the same as the standard type. See inner construction, major parts and materials on p. 363 and dimensions on p. 364~365.

The sealant is not applied to the R taper thread portion of the **NCU** specification fittings.

Caution: For delivery, consult us.

Order codes

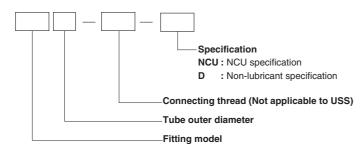

※For the fitting models, the tube size and thread combinations, see the table below. Columns showing the "←" symbol indicate that standard products can be used as the NCU specification. In these cases, place orders for the standard products.

Model Table (NCU Specification)

				1011 10 11
Fitting type	Tube outer diameter	Thread	Standard type model (reference)	NCU specification model
	ularrietei	MENCO	, ,	
	4	M5×0.8	TSS4-M5	←
		R1/8	TSS4-01	TSS4-01-NCU
		M5×0.8	TSS6-M5	-
	6	R1/8	TSS6-01	TSS6-01-NCU
		R1/4	TSS6-02	TSS6-02-NCU
Straight		R1/8	TSS8-01	TSS8-01-NCU
TSS	8	R1/4	TSS8-02	TSS8-02-NCU
133		R3/8	TSS8-03	TSS8-03-NCU
		R1/4	TSS10-02	TSS10-02-NCU
	10	R3/8	TSS10-03	TSS10-03-NCU
		R1/2	TSS10-04	TSS10-04-NCU
	40	R3/8	TSS12-03	TSS12-03-NCU
	12	R1/2	TSS12-04	TSS12-04-NCU
	4	M5×0.8	TLS4-M5	←
	4	R1/8	TLS4-01	TLS4-01-NCU
	6	M5×0.8	TLS6-M5	←
		R1/8	TLS6-01	TLS6-01-NCU
		R1/4	TLS6-02	TLS6-02-NCU
		R1/8	TLS8-01	TLS8-01-NCU
Elbow	8	R1/4	TLS8-02	TLS8-02-NCU
TLS		R3/8	TLS8-03	TLS8-03-NCU
		R1/4	TLS10-02	TLS10-02-NCU
	10	R3/8	TLS10-03	TLS10-03-NCU
		R1/2	TLS10-04	TLS10-04-NCU
		R3/8	TLS12-03	TLS12-03-NCU
	12	R1/2	TLS12-04	TLS12-04-NCU
	4		USS4	←
Union	6		USS6	←
straight	8		USS8	←
	10		USS10	←
USS	12		USS12	←
			-	

Model Table (Non-lubricant Specification)

Fitting type	Tube outer diameter	Thread	Standard type model (reference)	Non-lubricant specification model	
	4	M5×0.8	TSS4-M5	TSS4-M5- D	
	4	R1/8	TSS4-01	TSS4-01- D	
		M5×0.8	TSS6-M5	TSS6-M5- D	
	6	R1/8	TSS6-01	TSS6-01- D	
		R1/4	TSS6-02	TSS6-02- D	
Ctroight		R1/8	TSS8-01	TSS8-01- D	
Straight TSS	8	R1/4	TSS8-02	TSS8-02- D	
133		R3/8	TSS8-03	TSS8-03- D	
		R1/4	TSS10-02	TSS10-02- D	
	10	R3/8	TSS10-03	TSS10-03- D	
		R1/2	TSS10-04	TSS10-04- D	
	40	R3/8	TSS12-03	TSS12-03- D	
	12	R1/2	TSS12-04	TSS12-04- D	
	4	M5×0.8	TLS4-M5	TLS4-M5- D	
	4	R1/8	TLS4-01	TLS4-01- D	
	6	M5×0.8	TLS6-M5	TLS6-M5- D	
		R1/8	TLS6-01	TLS6-01- D	
		R1/4	TLS6-02	TLS6-02- D	
Elbow		R1/8	TLS8-01	TLS8-01- D	
TLS	8	R1/4	TLS8-02	TLS8-02- D	
ILS		R3/8	TLS8-03	TLS8-03- D	
		R1/4	TLS10-02	TLS10-02- D	
	10	R3/8	TLS10-03	TLS10-03- D	
		R1/2	TLS10-04	TLS10-04- D	
	12	R3/8	TLS12-03	TLS12-03- D	
	12	R1/2	TLS12-04	TLS12-04- D	
	4		USS4	USS4-D	
Union	6		USS6	USS6-D	
straight	8		USS8	USS8-D	
USS	10		USS10	USS10-D	
	12		USS12	USS12-D	

Safety Precautions (Quick Fittings with Stop Valves)

The following is a safety precaution to Quick Fittings with Stop Valves. For other safety precautions, be sure to read the precautions on p.49.

/N Warning

●With the exception of the Quick Fittings Rotary Type, do not use any quick fitting in locations where thread portions or tubes are subject to swing or rotation. The swing or rotation could result in damage to the fitting body.

- Be aware when attempting to disconnect a tube from a Quick Fitting with Stop Valve while the system is still applied internal pressure, because the internal pressure could cause the tube
- ■Use the symbol on the main body to check the direction of the check valve operation. Note that the air will not stop if a tube is disconnected in the direction opposite to the check valve operation.

Handling Instructions and Precautions

Mounting

Precautions for mounting the body

- 1. To mount the body, use a suitable tool to tighten it to the outer or inner hexagonal section of the fitting.
- 2. When tightening screws, tighten to the recommended tightening torque shown in the table below. Tightening to more than the recommended torque could result in broken threads or air leaks due to deformed gaskets. Tightening to less than the recommended torque could lead to loose screws or air leaks.
- 3. For fittings with fixed piping direction, tighten to the desired piping direction, and then adjust so that it falls within the range of the body tightening torque.

Recommended tightening torque, sealant color, and gasket material

thread type	Thread size	Tightening torque	Sealant color	Gasket material	
Metric thread	M5×0.8	1.0∼1.5N·m [8.9∼13.3in·lbf]	_	SUS304	
wethe thread	M6×1	M6×1 1.8~2.3N·m [15.9~20.4in·lbf]		NBR	
	R1/8	7∼9N·m [62∼80in·lbf]		_	
Taper pipe	R1/4	12∼14N·m [106∼124in·lbf]	White		
thread	R3/8	22~24N·m [195~212in·lbf]	vvriite		
	R1/2	28~30N·m [248~266in·lbf]			

Precautions for disconnecting the body

- 1. To disconnect the body, use a suitable tool to loosen it from the outer or inner hexagonal section of the body.
- 2. Clean off the sealant coating on the thread of the removed mating part. The coated sealant could enter other relating parts, and cause breakdowns.

Method for tightening screws


For tightening screws, use a wrench on outer hexagonal section.



Caution: While the quick fitting sealant can be reused a number of times, the thread on the mating part may also be adhered with sealant. Always clean out the inside of the equipment's female thread.

Tube connection and disconnection Precautions for connecting the tube

- 1. Check that the cut section of the tube has been cut at straight angle, that the outer surface of the tube is not scratched, and that the tube has not become oval shaped.
- 2. When connecting a tube, failure to insert the tube all the way to the end could result in air leaks.



3. After connection, pull the tube to check that it will not disconnect.


Precautions for disconnecting the tube

- 1. Before disconnecting a tube, check that the pressure inside the tube is down to zero.
- 2. Push the release ring evenly all the way to the end, and then pull the tube out. An insufficient push could make it impossible to pull the tube out, or could scratch the tube, leaving scratched tube material inside the fitting.


Tube connection and disconnection method

1. Tube connection

The Quick Fitting with Stop Valve is equipped with a lock claw that holds the tube in place when it has been pushed all the way to the end, and with an elastic sleeve for sealing the tube periphery.



To disconnect the tube, first push on the release ring, releasing the lock claw, and then pull the tube out. Always stop the air supply before disconnecting the tube.

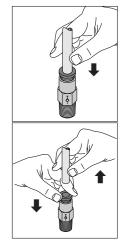

For cases where tight or cramped piping spaces hinder tube removal operations, a special tool is available. Consult us for details.

Special tool for tube removal

For ϕ 3 [0.118in.], ϕ 4 [0.157in.] and ϕ 6 [0.236in.] tubes



For ϕ 6 [0.236in.], ϕ 8 [0.315in.], ϕ 10 [0.394in.] and ϕ 12 [0.472in.] tubes Order code: UJ-2



Handling Instructions and Precautions

Usable tubes

Either nylon or urethane tubes can be used. The tube outer diameter accuracy should be, for nylon tubes, within $\pm 0.1 \text{mm}$ [$\pm 0.004 \text{in.}$] of the nominal dimensions, and for urethane tubes, within $\pm 0.15 \text{mm}$ [$\pm 0.006 \text{in.}$] of the nominal dimensions, while the ovalness (difference between long diameter and short diameter) should be within 0.2mm [0.008 in.].

- **Cautions: 1.** Use tubes with no visible scratches on the outer surface. If a scratch is made during repeated use, cut off the scratched section.
 - 2. Do not bend or twist the tube too much near the connection to the fitting. It could result in air leaks. The minimum bending radius for nylon tubes is as shown in the table below.

mm [in.]

Tube size	Minimum bending radius
φ 4 [0.157]	20 [0.8]
φ 6 [0.236]	30 [1.2]
φ 8 [0.315]	50 [2.0]
φ 10 [0.394]	80 [3.2]
φ 12 [0.472]	150 [5.9]